

LLDP Configuration Commands

Официальный дистрибьютор в России и СНГ ООО «ТМС»
Адрес: Россия, 117519, г. Москва, Варшавское ш., дом 133, помещение 370

Тел: +7 (495) 723-81-21
Факс: +7 (495) 723-81-22
Техподдержка 24/7: +7 (495) 723-33-33
E-mail: sales@tmc.ru
Сайт: www.dgsys.ru

Table of Contents

Chapter 1 LLDP Configuration Commands.....	1
1.1 LLDP Commands.....	1
1.1.1 lldp run.....	1
1.1.2 lldp holdtime.....	2
1.1.3 lldp timer.....	2
1.1.4 lldp reinit.....	3
1.1.5 lldp tlv-select.....	4
1.1.6 lldp dot1-tlv-select.....	5
1.1.7 lldp dot3-tlv-select.....	6
1.1.8 lldp med-tlv-select.....	7
1.1.9 lldp transmit.....	8
1.1.10 lldp receive.....	9
1.1.11 lldp management-ip.....	9
1.1.12 lldp trap-send.....	10
1.1.13 location elin identifier id WORD.....	11
1.1.14 location civic identifier id.....	12
1.1.15 location elin/civic id.....	14
1.1.16 show lldp errors.....	15
1.1.17 show lldp interface.....	15
1.1.18 show lldp neighbors.....	16
1.1.19 show lldp neighbors detail.....	17
1.1.20 show lldp traffic.....	19
1.1.21 show location elin.....	20
1.1.22 show location civic [identifier id].....	20
1.1.23 clear lldp counters.....	21
1.1.24 clear lldp table.....	22

Chapter 1 LLDP Configuration Commands

1.1 LLDP Commands

1.1.1 lldp run

Syntax

To enable LLDP, run `lldp run`; to disable LLDP, run `no lldp run`.

lldp run

no lldp run

Parameters

None

Default Value

The debugging switch is disabled.

Usage Guidelines

The port will send lldp packets after the lldp function is enabled.

Command Mode

Global configuration mode

Example

The following command is used to enable LLDP.

```
switch_config# lldp run
```

1.1.2 lldp holdtime

Syntax

To configure the ttl value of LLDP, run `lldp holdtime time`. To resume the default transmission delay, run `no lldp holdtime`.

lldp holdtime time

no lldp holdtime

Parameters

Parameters	Description
<i>time</i>	Holdtime of the to-be-transmitted packet Range: 0-65535 seconds

Default Value

120s

Usage Guidelines

In normal condition, the remote information stored in MIB will update before aging. But the frame may loss in sending and causes the information ages. For avoiding this, you need to set the value of TTL and ensure the update LLDP frame is forwarded time after time.

Command Mode

Global configuration mode

Example

The following example shows how to set the ttl value of LLDP to 100 seconds.

```
switch_config# lldp holdtime 100
switch_config#
```

1.1.3 lldp timer

Syntax

To configure the transmission delay of LLDP, run `lldp timer time`. To resume the default transmission delay, run `no lldptimer`.

lldp timer time

no lldp timer

Parameters

Parameters	Description
<i>time</i>	Interval for LLDP to transmit the packets Range: 5-65534 seconds

Default Value

30s

Usage Guidelines

The transmission interval of the LLDP message must be shorter than its storage time, ensuring multiple updates in the storage time and preventing error which is led by packet loss.

Command Mode

Global configuration mode

Example

The following example shows how to configure the transmission interval of LLDP to 24 seconds.

```
switch_config# lldp timer 24
switch_config#
```

1.1.4 lldp reinit

Syntax

To configure the transmission delay of LLDP, run `lldp reinit time`. To resume the default transmission delay, run `no lldp reinit`.

lldp reinit time

no lldp reinit

Parameters

Parameters	Description
<i>time</i>	Transmission delay of LLDP, whose values range from two to five seconds Range: 2-5 seconds

Default Value

2 s

Usage Guidelines

LLDP information will be forwarded automatically in two conditions: first, the status or value of one or more information elements (management objects) change; second, the sending timer timeouts. A single information change cause the LLDP packet is forwarded and a series of information change may cause many LLDP frames forwarded, but a frame can only report one change. For avoiding this, the web management defines the interval of two continuous LLDP frames.

Command Mode

Global configuration mode

Example

The following example shows how to set the transmission delay of LLDP to five seconds.

```
switch_config# lldp reinit 5
switch_config#
```

1.1.5 lldp tlv-select

Syntax

To add TLV which is transmitted by the LLDP message, run **lldp med-tlv-select tlv-type**. To delete TLV which is transmitted by the LLDP message, run **no lldp med-tlv-select tlv-type**.

lldp tlv-select tlv-type

no lldp tlv-select tlv-type

Parameters

Parameters	Description								
<i>tlv-type</i>	Stands for TLV that are available for selective transmission. Its values are: <table> <tr> <td>management-address</td><td>management address TLV</td></tr> <tr> <td>port-description</td><td>port description TLV</td></tr> <tr> <td>system-capabilities</td><td>system-capabilities TLV</td></tr> <tr> <td>system-description</td><td>system description TLV</td></tr> </table>	management-address	management address TLV	port-description	port description TLV	system-capabilities	system-capabilities TLV	system-description	system description TLV
management-address	management address TLV								
port-description	port description TLV								
system-capabilities	system-capabilities TLV								
system-description	system description TLV								

	system-name	system name TLV
--	-------------	-----------------

Default Value

All TLVs are sent.

Usage Guidelines

Three mandatory TLVs must be sent.

Command Mode

Global configuration mode

Example

The following example shows how to enable the port description not to be transmitted in the message.

```
switch_config#no lldp tlv-select port-description
switch_config#
```

1.1.6 lldp dot1-tlv-select

Syntax

To add TLV which is transmitted by the LLDP message, run `lldp med-tlv-select tlv-type`. To delete TLV which is transmitted by the LLDP message, run `no lldp med-tlv-select tlv-type`.

lldp dot1-tlv-select tlv-type

no lldp dot1-tlv-select tlv-type

Parameters

Parameters	Description
<i>tlv-type</i>	Stands for TLV that are available for selective transmission. Its values are:
port-vlan-id	port vlan address TLV
protocol-vlan-id	port and protocol VLAN ID TLV
vlan-name	vlan 名 TLV

Default Value

All TLVs are sent.

Usage Guidelines

The TLV of the protocol identity does not support transmission but supports reception.

Command Mode

Port configuration mode

Example

The following example shows how to enable the TLV not to be transmitted by deletion of the VLAN address of a port in the transmitted packet.

```
switch_config#int g0/1
switch_config_g0/1#no lldp dot1-tlv-select port-vlan-id
switch_config_g0/1#
```

1.1.7 lldp dot3-tlv-select

Syntax

To add TLV which is transmitted by the LLDP message, run `lldp med-tlv-select tlv-type`.
To delete TLV which is transmitted by the LLDP message, run `no lldp med-tlv-select tlv-type`.

lldp dot3-tlv-select tlv-type

no lldp dot3-tlv-select tlv-type

Parameters

Parameters	Description
<i>tlv-type</i>	Stands for TLV that are available for selective transmission. Its values are:
link-aggregation	link aggregation TLV
macphy-config	MAC/Phy configuration/status TLV
max-frame-size	max frame size TLV
power	Power Via MDI TLV

Default Value

All TLVs are sent.

Usage Guidelines

None

Command Mode

Port configuration mode

Example

The following example shows how to enable the TLV not to be transmitted by deletion of the MAC/Phy configuration/status of a port in the transmitted packet.

```
switch_config#int g0/1
switch_config_g0/1#no lldp dot3-tlv-select macphy-config
switch_config_g0/1#
```

1.1.8 lldp med-tlv-select

Syntax

To add TLV which is transmitted by the LLDP message, run `lldp med-tlv-select tlv-type`.
To delete TLV which is transmitted by the LLDP message, run `no lldp med-tlv-select tlv-type`.

lldp med-tlv-select *tlv-type*

no lldp med-tlv-select *tlv-type*

Parameters

Parameters	Description								
<i>tlv-type</i>	Stands for TLV that are available for selective transmission. Its values are: <table> <tr> <td>network-policy</td><td>network policy TLV</td></tr> <tr> <td>inventory</td><td>inventory management TLV</td></tr> <tr> <td>location</td><td>location identification TLV</td></tr> <tr> <td>power-management</td><td>expand Power Via MDI TLV</td></tr> </table>	network-policy	network policy TLV	inventory	inventory management TLV	location	location identification TLV	power-management	expand Power Via MDI TLV
network-policy	network policy TLV								
inventory	inventory management TLV								
location	location identification TLV								
power-management	expand Power Via MDI TLV								

Default Value

All TLVs are sent.

Usage Guidelines

By default, the TLV of MED cannot be transmitted. When the TLV of MED need be transmitted, the MED capability TLV must be transmitted. Hence it does not fall into the choice.

Command Mode

Port configuration mode

Example

The following example shows how to enable the TLV not to be transmitted by deletion of the detailed list management in a transmitted packet.

```
switch_config#int g0/1
switch_config_g0/1#no lldp med-tlv-select inventory
switch_config_g0/1#
```

1.1.9 lldp transmit

Syntax

lldp transmit

no lldp transmit

To set the port to send the LLDP message, run **lldp transmit**. To forbid receiving the LLDP message, run **no lldp transmit**.

Parameters

None

Default Value

Transmittable LLDP message mode

Usage Guidelines

Only after the LLDP module is enabled can the command be valid.

Command Mode

Port configuration mode

Example

The following example shows how to set port g0/1 not to send the LLDP message.

```
switch_config_g0/1# no lldp transmit
switch_config_g0/1#
```

1.1.10 lldp receive

Syntax

lldp receive

no lldp receive

To set the port to the receivable LLDP message mode, run lldp receive. To forbid receiving the LLDP message, run no lldp receive.

Parameters

None

Default Value

Receivable LLDP message mode

Usage Guidelines

Only after the LLDP module is enabled can the configuration be valid.

Command Mode

Port configuration mode

Example

The following example shows how to set port g0/1 not to receive the LLDP message.

```
switch_config_g0/1# no lldp receive
switch_config_g0/1#
```

1.1.11 lldp management-ip

Syntax

lldp management-ip A.B.C.D

no lldp management-ip

To configure the management address of the LLDP port, run lldp management-ip A.B.C.D. To resume the default transmission delay, run no lldp management-ip.

Parameters

Parameters	Description
<i>A.B.C.D</i>	Stands for the management IP address that will be specified.

Default Value

The default management address is the IP address of the VLAN interface that pvid corresponds to; if this IP address does not exist, the default management address is 0.0.0.0.

Usage Guidelines

The configured management IP address should be the IP address related with a port.

Command Mode

Port configuration mode

Example

The following example shows how to set the management IP address of port g0/1 to 90.0.0.99.

```
switch_config_g0/1# lldp management-ip 90.0.0.99
switch_config_g0/1#
```

1.1.12 lldp trap-send

Syntax

lldp trap-send lldp-mib

To forward trap notification to lldp mib, run this command.

lldp trap-send ptopo-mib

To forward trap notification to ptopo mib, run this command.

Parameters

None

Default Value

None

Usage Guidelines

None

Command Mode

Global configuration mode

Example

The following example shows how to send trap notification to lldp mib.

```
switch_config#lldp trap-send lldp-mib
```

```
switch_config#
```

The following example shows how to send trap notification to ptopo mib.

```
switch_config#lldp trap-send ptopo-mib
```

```
switch_config#
```

1.1.13 location elin identifier id WORD

Syntax

location elin identifier id WORD

no location elin identifier id

To add the elin information, run **location elin identifier id WORD**; to delete the elin information, run **no location elin identifier id**.

Parameters

Parameters	Description
<i>id</i>	Stands for the ID of the to-be-set elin, which ranges from 1 to 65535.
<i>WORD</i>	Stands for the content of the configured elin, which ranges from 10 to 25 bytes.

Default Value

None

Usage Guidelines

None

Command Mode

Global configuration mode

Example

The following example shows how to set the identifier to 1 and the content of elin to 1234567890.

```
switch_config# location elin identifier 1 1234567890
switch_config#
```

1.1.14 location civic identifier id

Syntax

location civic identifier *id*

no location civic identifier *id*

To enter the location configuration mode and set the civic information, run location civic identifier id. To delete the civic information, run no location civic identifier id.

Parameters

Parameters	Description
<i>id</i>	Stands for the ID of the to-be-set civic, which ranges from 1 to 65535.

Default Value

None

Usage Guidelines

After the system enters the location configuration mode, you can run the following commands to conduct the corresponding configuration to the civic of the ID.

Command	Purpose
(no) language WORD	Sets the language.
(no) state WORD	Sets the state's (provincial) name, such as shanghai.

(no) county WORD	Sets the name of a county.
(no) city WORD	Sets the name of a city.
(no) division WORD	Sets the name of a division.
(no) neighborhood WORD	Sets the name of neighborhood.
(no) street WORD	Sets the name of a street.
(no) leading-street-dir WORD	Sets the direction of a main street, such as N (north).
(no) trailing-street-suffix WORD	Sets the suffix of a small street, such as SW.
(no) street-suffix WORD	Sets the suffix of a street, such as platz.
(no) number WORD	Sets the street number, such as number 123.
(no) street-number-suffix WORD	Sets the suffix of the street number, such as number 1/2 of A road.
(no) landmark WORD	Sets the landmark, such as Colombia University.
(no) additional-location WORD	Sets the additional location.
(no) name WORD	Sets the information about a resident, such as Joe's haircut shop.
(no) postal-code WORD	Sets the postal code.
(no) building WORD	Sets the information about a building.
(no) unit WORD	Sets the information about a unit.
(no) floor WORD	Sets the information about a floor.
(no) room WORD	Sets the information about a room.
(no) type-of-place WORD	Sets the type of a place, such as office.
(no) postal-community WORD	Sets the name of a postal office.
(no) post-office-box WORD	Sets the name of a postal box, such as 12345.
(no) additional-code WORD	Sets the additional code.
(no) country WORD	Sets the name of a country.
(no) script WORD	Sets the script.

Command Mode

Global configuration mode

Example

The following example shows how to set the civic information of identifier 1.

```
Switch_config#location civic identifier 1
```

```
Switch_config_civic#language English
```

```
Switch_config_civic#city Shanghai
```

```
Switch_config_civic#street Curie
Switch_config_civic#script EN
Switch_config_civic#quit
Switch_config#
```

1.1.15 location elin/civic id

Syntax

location elin/civic id

no location elin/civic

To set the location for a port, run location elin/civic id. To delete the location of a port, run no location elin/civic id.

Parameters

Parameters	Description
<i>id</i>	Stands for the ID of the to-be-set elin/civic, which ranges from 1 to 65535.

Default Value

None

Usage Guidelines

None

Command Mode

Port configuration mode

Example

The following example shows how to set the elin and the civic for a port.

```
Switch_config#int g0/8
Switch_config_g0/8#location elin 1
Switch_config_g0/8#location civic 1
```


1.1.16 show lldp errors

Syntax

show lldp errors

To display the error information about the LLDP module, run this command.

Parameters

None

Default Value

None

Usage Guidelines

None

Command Mode

EXEC/global configuration mode

Example

The following example shows how to check the error information of lldp module.

```
switch_config#show lldp errors
LLDP errors/overflows:
    Total memory allocation failures: 0
    Total encapsulation failures: 0
    Total table overflows: 0
switch_config#
```

1.1.17 show lldp interface

Syntax

show lldp interface *interface-name*

To check the transmission and reception mode, run show lldp interface interface name.

Parameters

Parameters	Description
<i>interface-name</i>	The interface name, for instance, "G0/1", "GigaEthernet0/1".

Default Value

None

Usage Guidelines

Only when lldp is enabled can the state of the port, the transmission and reception mode of lldp packets can be checked.

Command Mode

EXEC/global configuration mode

Example

The following example shows how to check the transmission and reception mode of port g0/1.

```
switch_config#show lldp interface g0/1
GigaEthernet0/1:
Rx: enabled
Tx: enabled
switch_config#
```

1.1.18 show lldp neighbors

Syntax

show lldp neighbors

To display the simple information about neighbors, run this command.

Parameters

None

Default Value

None

Usage Guidelines

The command is used to display the simple information about neighbor list, including Device-ID, Local-Intf, Hldtme, Port-ID and Capability.

Command Mode

EXEC/global configuration mode

Example

```
switch_config#show lldp neighbors
```

Capability Codes:

(R)Router,(B)Bridge,(C)DOCsIs Cable Device,(T)Telephone

(W)WLAN Access Point, (P)Repeater,(s)station,(O)Other

Device-ID	Local-Intf	Hldtme	Port-ID	Capability
switch	Gig0/2	115	Gig0/32	B
switch	Gig0/32	114	Gig0/2	B

Total entries dispalyed: 2

```
switch_config#
```

1.1.19 show lldp neighbors detail

Syntax

show lldp neighbors detail

It is used to display the detailed information about the neighbor.

Parameters

None

Default Value

None

Usage Guidelines

None

Command Mode

EXEC/global configuration mode

Example

```
switch_config#show lldp neighbors detail
```

```
chassis id: 00e0.0f61.ca53
port id: Gig0/32
port description: GigaEthernet0/32
system name: switch
```

```
system description: s3448 software, Version 2.0.1K
serial: s35000456
Compiled: 2008-11-13 13:33:36 by 16170F032B9F
```

```
Time remaining: 98
system capabilities: R B
enabled capabilities: B
Managment Address:
  IP: 192.168.213.62
```

```
Auto Negotiation -- supported,enabled
```

```
Physical media capabilitise:
```

```
  100baseTX(FD)
  100baseTX(HD)
  10baseT(FD)
  10baseT(HD)
```

```
Media Attachment Unit type: 16
```

```
-----
chassis id: 00e0.0f61.ca35
port id: Gig0/2
port description: GigaEthernet0/2
system name: switch
```

```
system description: s3448 software, Version 2.0.1K
serial: s35000456
Compiled: 2008-11-13 13:33:36 by 16170F032B9F
```

```
Time remaining: 95
system capabilities: R B
enabled capabilities: B
Managment Address:
  IP: 90.0.0.66
```

Auto Negotiation -- supported,enabled

Physical media capabilities:

100baseTX(FD)

100baseTX(HD)

10baseT(FD)

10baseT(HD)

Media Attachment Unit type: 16

Total entries displayed: 2

switch#

1.1.20 show lldp traffic

Syntax

show lldp traffic

To display all statistics information about LLDP, run show lldp traffic.

Parameters

None

Default Value

None

Usage Guidelines

None

Command Mode

EXEC/global configuration mode

Example

```
switch_config#show lldp traffic
```

LLDP traffic statistics:

Total frames out: 1599

Total entries aged: 0

Total frames in: 624

```
Total frames received in error: 0
Total frames discarded: 0
Total TLVs unrecognized: 0
switch_config#
```

1.1.21 show location elin

Syntax

show location elin

To display the elin configuration of the location, run the previous command.

Parameters

None

Default Value

None

Usage Guidelines

None

Command Mode

EXEC/global configuration mode

Example

```
Switch_config#show location elin
elin information:
  elin 2: 0987654321
  elin 1: 1234567890
total: 2
Switch_config#
```

1.1.22 show location civic [identifier id]

Syntax

show location civic [identifier id]

To display the civic information of the location, run the previous command.

Parameters

Parameters	Description
<i>id</i>	Stands for the ID of the to-be-set civic, which ranges from 1 to 65535.

Default Value

None

Usage Guidelines

None

Command Mode

EXEC/global configuration mode

Example

```
Switch_config#show location civic
civic address information:
  identifier: 2
  Language: Chinese
  Script: CN
-----
  identifier: 1
  City: Shanghai
  Language: English
  Script: EN
-----
total: 2
Switch_config#
```

1.1.23 clear lldp counters

Syntax

clear lldp counters

To clear the statistics information, run clear lldp counters.

Parameters

None

Default Value

None

Usage Guidelines

None

Command Mode

EXEC

Example

```
switch#clear lldp counters
switch#
switch#show lldp traffic
LLDP traffic statistics:
    Total frames out: 0
    Total entries aged: 0
    Total frames in: 0
    Total frames received in error: 0
    Total frames discarded: 0
    Total TLVs unrecognized: 0
switch#
switch#show lldp errors
LLDP errors/overflows:
    Total memory allocation failures: 0
    Total encapsulation failures: 0
    Total table overflows: 0
switch#
```

1.1.24 clear lldp table

Syntax

clear lldp table

To remove the neighbor list, run cleas lldp table.

Parameters

None

Default Value

None

Usage Guidelines

None

Command Mode

EXEC

Example

```
switch#clear lldp table
```

```
switch#
```

```
switch#show lldp neighbors
```

Capability Codes:

(R)Router,(B)Bridge,(C)DOCSIs Cable Device,(T)Telephone

(W)WLAN Access Point, (P)Repeater,(s)station,(O)Other

Device-ID	Local-Intf	Hldtme	Port-ID	Capability
-----------	------------	--------	---------	------------

Total entries displayed: 0