

MACFF Configuration Commands

Официальный дистрибьютор в России и СНГ ООО «ТМС»
Адрес: Россия, 117519, г. Москва, Варшавское ш., дом 133, помещение 370

Тел: +7 (495) 723-81-21
Факс: +7 (495) 723-81-22
Техподдержка 24/7: +7 (495) 723-33-33
E-mail: sales@tmc.ru
Сайт: www.dgsys.ru

Table of Contents

1.1 macff enable.....	1
1.2 macff vlan <i>vlan_id</i> enable.....	2
1.3 macff vlan <i>vlan_id</i> default-ar <i>A.B.C.D</i>	2
1.4 macff vlan <i>vlan_id</i> other_ar <i>A.B.C.D</i>	3
1.5 macff disable.....	4
1.6 debug macff.....	4

Chapter 1 MACFF Configuration Commands

MACFF configuration commands include:

- `macff enable`
- `macff vlan vlan_id enable`
- `macff vlan vlan_id default-ar A.B.C.D`
- `macff vlan vlan_id other_ar A.B.C.D`
- `debug macff`

1.1 `macff enable`

Syntax

To enable or disable the MACFF function globally, run the following command. To return to the default setting, use the no form of this command.

`macff enable`

`no macff enable`

Parameters

None

Default Value

MACFF function is disabled by default.

Usage Guidelines

None

Example

The following example shows how to enable the MACFF function.

```
Switch_config#macff enable
```

```
Switch_config#
```

1.2 macff vlan *vlan_id* enable

Syntax

macff vlan *vlan_id* enable

no macff vlan *vlan_id* enable

Parameters

Parameters	Description
<i>vlan_id</i>	Stands for the ID of a VLAN. Value range: 1-4094

Default Value

None

Usage Guidelines

The command is used to send MAC-Based VLAN.

Example

The following example shows how to enable MACFF on VLAN 2 and the default gateway address is 192.168.1.1.

```
Switch_config#arp 192.168.1.1 00:e0:0f:17:92:ed vlan 2
```

```
Switch_config#macff vlan 2 enable
```

```
Switch_config#
```

1.3 macff vlan *vlan_id* default-ar *A.B.C.D*

Syntax

To bind DHCP snooping to standby TFTP server, run ip dhcp-relay snooping database-agent *A.B.C.D*.

macff vlan *vlan_id* default-ar *A.B.C.D*

no macff vlan *vlan_id* default-ar *A.B.C.D*

Parameters

Parameters	Description
<i>A.B.C.D</i>	IP address of the default gateway

Default Value

None

Usage Guidelines

This command is used when you set the IP address of the client host and the default gateway manually. Of course, you also need to add the DHCP snooping binding table manually.

Example

The following example shows how to set the address of MACFF binding gateway in vlan1 to 192.168.1.1 and the client's address to 192.168.1.10.

```
Switch_config#arp 192.168.1.1 00:e0:0f:17:92:ed vlan 1
```

```
Switch_config#ip source binding 6c:62:6d:59:18:b6 192.168.1.10 interface
GigaEthernet0/1
```

```
Switch_config# macff vlan 1 default-ar 192.168.1.1
```

```
Switch_config#
```

1.4 macff vlan *vlan_id* other_ar *A.B.C.D*

Syntax

macff vlan *vlan_id* other_ar *A.B.C.D*

no macff vlan *vlan_id* other_ar *A.B.C.D*

Parameters

Parameters	Description
<i>A.B.C.D</i>	Stands for the IP address of service AR.

Default Value

None

Usage Guidelines

When the network segment where the client host is has other service ARs and these ARs are only accessed by the client directly without the need of gateway to forwarding packets, this command can be used to add these service ARs.

Example

The following example shows how to set an AR with its IP being 192.168.2.254 and its MAC being 00:e0:0f:23:02:fc on port g0/1 in vlan1.

```
Switch_config#arp 192.168.2.254 00:e0:0f:23:02:fc vlan 1
Switch_config#interface g0/1
Switch_config_g0/1# dhcp snooping trust
Switch_config_g0/1#exit
Switch_config#macff vlan 1 other_ar 90.1.1.1
```

1.5 macff disable

Syntax

macff disable
no macff disable

Parameters

None

Default Value

A specified port is allowed to enable MACFF.

Usage Guidelines

Though MACFF is enabled in a VLAN, MACFF can be disabled on one of the ports in this VLAN. The DHCP snooping functionality is not affected on this port after disabled its MACFF functionality.

Example

The following example shows how to disable MACFF on port g0/1.

```
Switch_config_g0/1#macff disable
Switch_config_g0/1#
```

1.6 debug macff

Syntax

debug macff

no debug macff

Parameters

None

Default Value

None

Usage Guidelines

This command is used to enable or disable the MACFF debugging switch.

Example

The following example shows how to enable the debugging switch of MACFF.

```
Switch_config#debug macff
```

```
Switch_config#
```